





# **OPERATION INSTRUCTION**

## **Video intercom system**

**QV-QDS4320-4340 series**

User Manual



# Appearance introduction

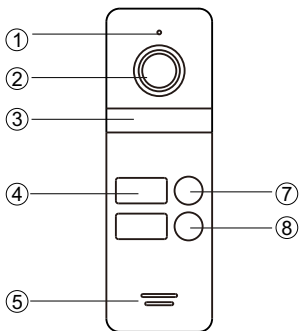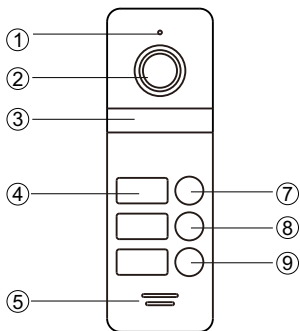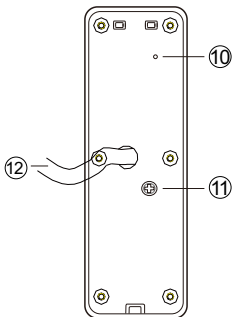
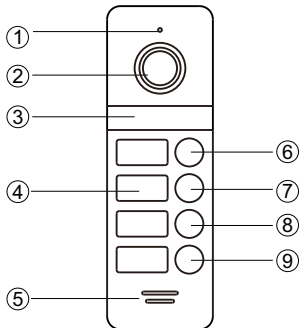


**Notice: Long press button 5s switch AHD/CVBS signal.**

1	Microphone	5	Speaker	9	Call button(Indoor4)
2	Camera	6	Call button(Indoor1)	10	AHD/CVBS signal switch
3	IR LEDs	7	Call button(Indoor2)	11	Volume regulator
4	Name Tag	8	Call button(Indoor3)	12	System port

# WIRING DIAGRAM

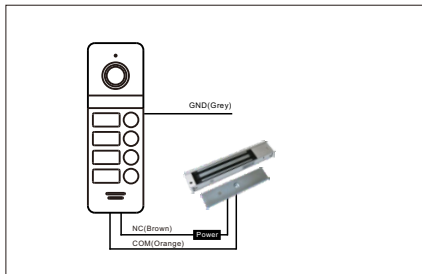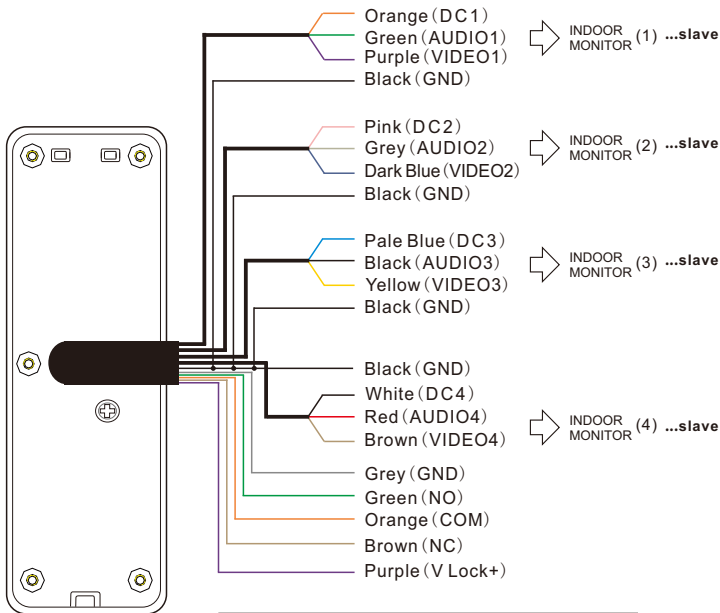


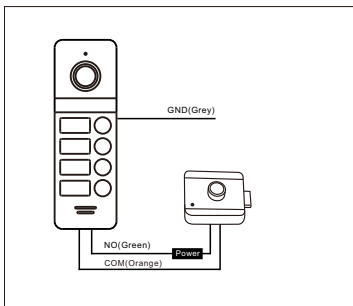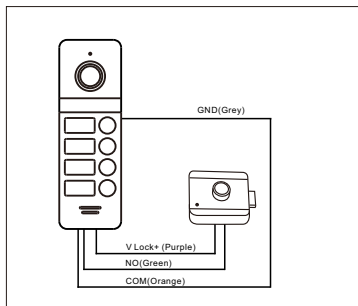


## PRODUCT SPECIFICATIONS

	Analog Video Intercom System	AHD Video Intercom System
Camera sensor	1/4" 1/3" CCD/CMOS camera	1/4" 1/3" CCD/CMOS camera
View angle	90°/(120°)	90°/(120°)
Definition(Hor.)	600TVL/800TV Line	720P/960P
LEDs for night	IR LEDs(60°)	IR LEDs(60°)
Power consumption	150mA max.	150mA max.
Power supplier	Supplied from indoor unit	Supplied from indoor unit
Operation temp.	-40~+50℃	-40~+50℃
Installation	Surface/flush mount	Surface/flush mount
IR CUT		Yes

## INSTALLATION DIAGRAM

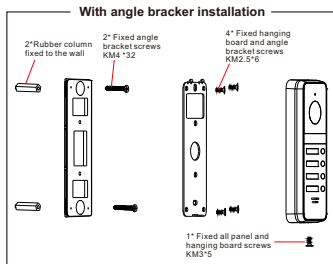


A

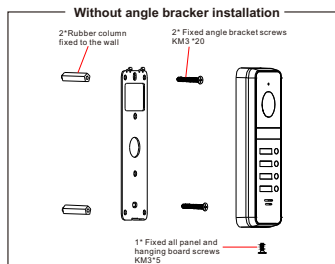

B

# INSTALLATION PROCESS OF OUTDOOR UNITS

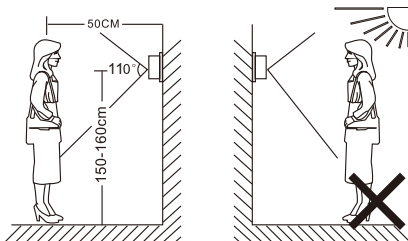

## NOTE:

- Avoid installation of the device near strong radiation e.g. AC motor and lift .
- Maintenance should be complied with qualified technician .
- Avoid hard shake , beating and collision ,otherwise the internal exact components maybe be damaged .
- Do not expose the outdoor camera under strong light or sunshine.
- Do not install the outdoor camera in the environment e.g. direct sunlight ,contact rain ,High temperature ,high humidity ,full of dust and chemistry corrosive.
- Select the most suitable position where the camera is located at user's eye level
- Switch off power supply before installation.
- Keep more than 30cm away from AC power supply to avoid external interference.
- Keep it away from the water and magnetic field.